


CORSBARSQ84
 CORSBAR151x80
 CORSBAR185x90
 CORSBAR230x90

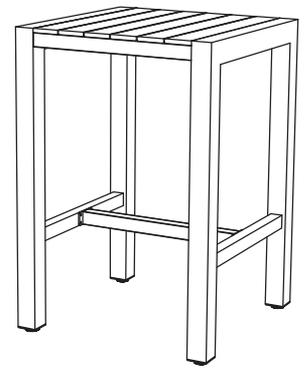

CORSICA





Assembly Instructions: Corsica Aluminium Bar Table

Before assembly please check you have all parts listed below.


PLEASE NOTE: We've tried to make this table as easy to assemble as possible.

In the unlikely event you have problems putting it together or missing pieces, please contact us. Details below.

PARTS LIST

A table top  X 1	B legs  X 2	C  X 1	D  X 4	E allen key  X 1	F (m6x90 screw)  X 8
G (m6x45 screw)  X 4	H (m6x12 screw)  X 8	I (m6x20 screw)  X 8	J  X 28	K  X 28	ASSEMBLY TIP To protect your table top from scratches during assembly, please assemble on the cardboard box.

Step 1

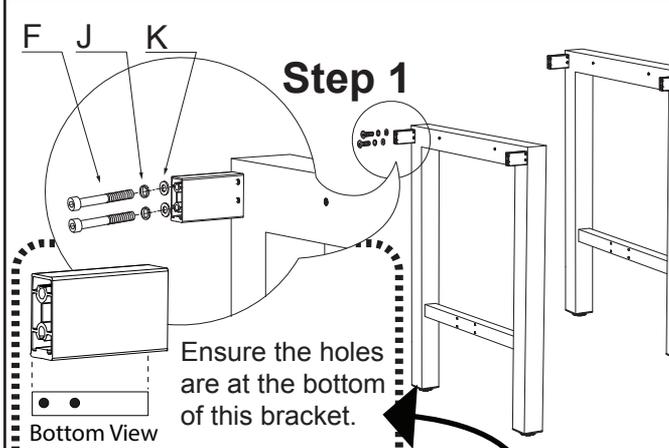


Ensure the holes are at the bottom of this bracket.

Bottom View (holes are furthest away from the leg)

Step 2


Slide together. Ensure holes in table top & leg bracket line up, (see step 3).

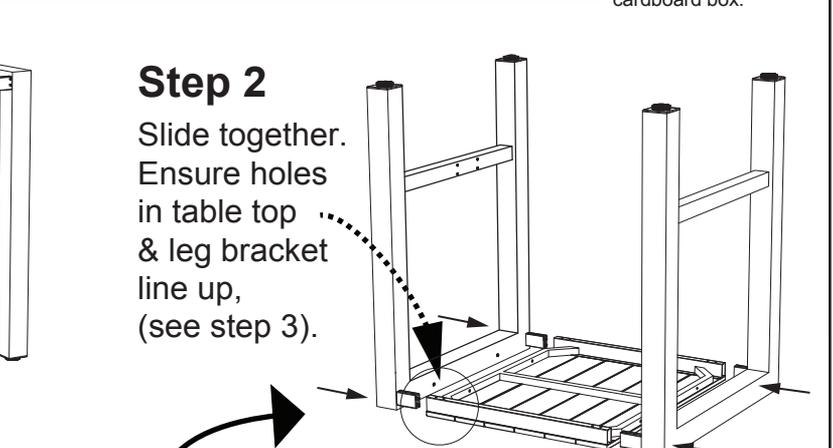

PLEASE NOTE: you only need to hand tighten this bracket. You may need to loosen one bracket if the table top does not slide smoothly into place. (These do not need to be tightened further.)


Step 3

Do not over tighten screws

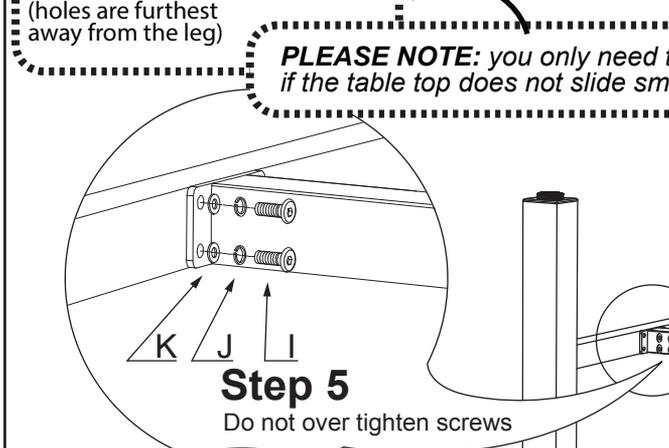


Step 4

Do not over tighten screws

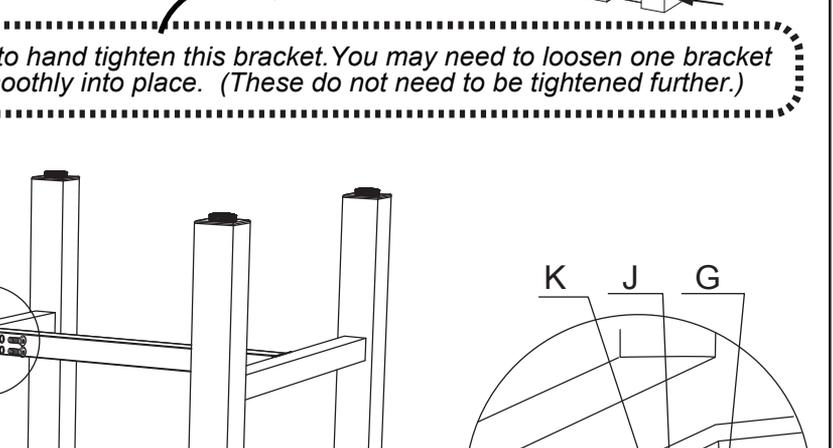

Step 5

Do not over tighten screws

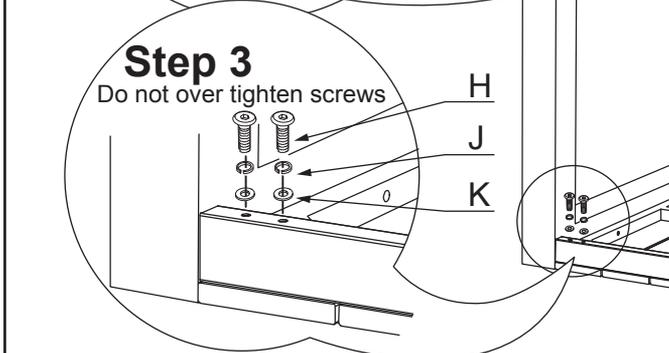

Step 6

Now tighten all screws.

Thank you for your purchase. Corsica tables are exclusively supplied by Chairforce.

To learn more about our products please visit www.chairforce.com.au and www.chairforce.co.nz

AU: Call: 08 9436 8570 Email: customercare@brayco.com.au

NZ: Call: 09 271 5000 Email: sales@chairforce.co.nz



Please recycle these instructions